



Diff pinion collapsible spacerAlso called a crush washer



Description

Diff Pinion collapsible spacer Used to set prelaod on the pinion bearings This spacer should be changed when diff pinion nut has been loosened