



Temp sender airflow 10/64 - 11/66

Description

Temp sender airflow 10/64 - 11/66

The auxillary gauges on cars built between 9/62 & 10/64 operate at 10 volts through the voltage stabilizer but cars built between 10/64 - 11/66 operate on 5 volts for the gauges.