



Voltage stabilizer 10/64 - 11/66 (5 volt) positive earth



## Description

Voltage stabilizer 10/64 - 11/66 (5 volt) positive earth - for car operating with a positive earth battery connection

This unit fits to the rear of the main dial clocks and controls the voltage supplied to the supplementary gauges such as the fuel & temperature

The auxillary gauges on cars cars built between 9/62 & 10/64 operate at 10 volts through the voltage stabilizer but cars built between 10/64 - 11/66 operate on 5 volts for the gauges.